

1 **1.1.1 Functions**

2 *Editorial Note: This is subclause 6.2.4*

3 RemoveField(field\_code)

4 This function is a method associated with structures used in the state diagrams. This method removes  
5 a field, specified by field\_code, from the structure. The field\_code parameter is one of the Field  
6 Code values specified in Table 6-2.

7