

1 **1.1.1 Functions**

2 *Editorial Note: This is subclause 6.2.4*

3 `ReplaceField(field_code1, field_code2)`

4 This function is a method associated with structures used in the state diagrams. This method replaces  
5 the value of a field in the structure, specified by `field_code1`, with the value from the field  
6 specified by `field_code2`. The `field_code1` and `field_code2` parameters are one of  
7 the Field Code values specified in Table 6-2.

8